



### Main

Range of product	Profibus DP
Product or component type	Profibus DP V1 remote master
Kit composition	CD including the communication DTM CD including the Master DTM for PRM configuration inside UNITY
Communication gateway	Ethernet Modbus TCP to Profibus DP V1 gateway
Product compatibility	M340 PLC M580 PLC Quantum PLC Premium PLC
Structure type	Industrial bus

### Complementary

Physical interface	RS485
Method of access	Master class 1 Profibus DP Master class 2 Profibus DP Slave Modbus TCP
Mode of transmission	NRZ
Transmission support medium	Profibus 2 twisted shielded pairs cable Modbus TCP category 5 shielded twisted pair (STP)
Transmission rate	12 Mbit/s, 100 m bus for Profibus without repeater 12 Mbit/s, 400 m bus for Profibus with 3 repeaters 9.6 kbit/s, 1200 m bus for Profibus without repeater 9.6 kbit/s, 4800 m bus for Profibus with 3 repeaters 10...100 Mbit/s, 100 m bus for Modbus TCP without repeater
Number of slave	126
Number of inputs	2
Number of outputs	2
Communication service	Check slave configuration (on power up) class 1 master Manage monitoring request (Global CONTROL and Get Master Diag) class 2 master No master/master dialogue class 2 master Profibus FMS message handling not supported class 1 master Profibus FMS message handling not supported class 2 master Read/Write DP slave I/O data class 1 master Set slave parameters (on power up) class 1 master Transfer slave diagnostic data class 1 master Sync and freeze class 1 master Acyclic DP V1 communication (R/W) class 1/2 master
Integrated connection type	2 Ethernet TCP/IP - RJ45 for Modbus TCP Profibus DP - SUB-D 9 for Profibus DP V1
Current consumption	200 mA at 24 V DC external
Module format	Standard
Product weight	0.62 kg

### Environment

Ambient air temperature for operation	0...60 °C
Ambient air temperature for storage	-45...85 °C
Relative humidity	10...95 % without condensation
Operating altitude	<= 2000 m

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric Industries SAS nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein.

## Offer Sustainability

REACH Regulation	<a href="#">REACH Declaration</a>
EU RoHS Directive	Pro-active compliance (Product out of EU RoHS legal scope) <a href="#">EU RoHS Declaration</a>
Toxic heavy metal free	Yes
Mercury free	Yes
RoHS exemption information	<a href="#">Yes</a>
China RoHS Regulation	<a href="#">China RoHS Declaration</a>
WEEE	The product must be disposed on European Union markets following specific waste collection and never end up in rubbish bins

## Contractual warranty

Warranty	18 months
----------	-----------


Module Mounting

At a glance

The PRM module can be installed either:

- With its support plate as a standalone module on a DIN rail, grid or panel
- Without its support plate as a Premium module inside the rack

Support Plate

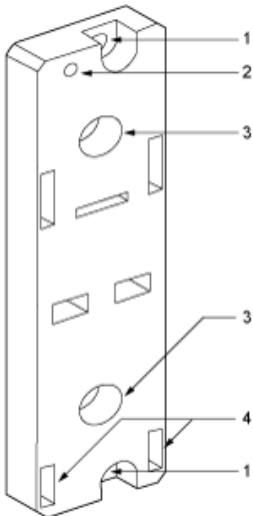

Label	Meaning
1	Two holes diameter 5.5 mm (7/32 in) allowing the support plate to be fixed to a panel or to an AM1-PA pre-slotted plate, with a center distance of 140 mm (5.51 in). Tightening torque: 1 to 1.2 N-m (8.8 to 10.6 lb-in).
2	M4 fixing hole for securing the PRM module.
3	Two holes diameter 6.5 mm (0.26 in) allowing the support plate to be fixed to a panel or to an AM1-PA pre-slotted plate with a center distance of 88.9 mm (3.5 in).
4	Slots for positioning the pins located at the bottom and rear of the module

Mounting on a DIN rail or Plate

Installation on Drilled plate	Installation on Din rail	Dimensions

Mounting Type		Dimensions			
		X		Y	
mm	in.	mm	in.		
Drilled Plate	(AM1-PA)			132.7	5.22
Din Rail	(AM1-DE200)	143.7	5.66		
Din Rail	(AM1-DP200)	136.2	5.36		

## Mounting on a Premium Rack


Mechanically, the PRM is mounted like other Premium modules. The support plate must be removed before mounting in this case.

Electrically, the PRM doesn't use the rack connector for communication or for power supply. It must be powered by an external power supply.

To detach the module from its support plate, follow the steps below:


Step 1:

Unfasten the screw located in the top of the module to loosen it from its support.

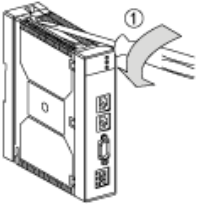

Step 2:

Pivot the module forwards and disengage the pins from the holes located in the bottom of the support.

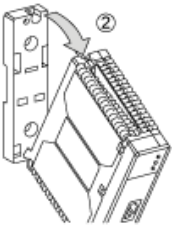

Refer to the Premium documentation for a description of the installation on the rack.