

SE Current Monitoring Series

H300-S6




SPECIFICATIONS

| | |
|------------------------------------|---|
| Sensor Power | Induced from monitored conductor |
| Amperage Range | 0.15 to 60 A Continuous |
| Status Output Ratings | N.O. 1.0 A@30 VAC/DC, not polarity sensitive |
| Insulation Class | 300 VAC RMS, insulated conductors only |
| Setpoint | Fixed at 0.15 A max. |
| Frequency | 50/60 Hz |
| Temperature Range | -15° to 60°C (5° to 140°F) |
| Humidity Range | 10-90% RH non-condensing |
| Off State Resistance | Open switch represents 1+ MΩ |
| On State Resistance | Closed switch represents <200 mΩ |
| Terminal Block Wire Size | 1.3 to 0.3 mm ² (16-22 AWG) |
| Terminal Block Torque | 0.8 N-m (7 in-lb) |
| Agency Approvals | CE:EN61010-1:2001 |
| Installation Category | Cat. III, pollution degree 2 |

For CE compliance, conductor shall be insulated according to IEC 61010-1:2010. The product design provides for functional insulation only.

The Schneider Electric H300-S6 is a current-sensitive switching device that monitors current (amperage) in the conductor passing through it. A change in the conductor's amperage that crosses the switch threshold causes the resistance of the FET status output to change state, similar to the action of a mechanical switch. The threshold is fixed at 150 mA AC max. The status output is suitable for connection to building controllers or other appropriate data acquisition equipment operating at up to 30 volts. The H300-S6 requires no external power supply to generate its output.

DIMENSIONS

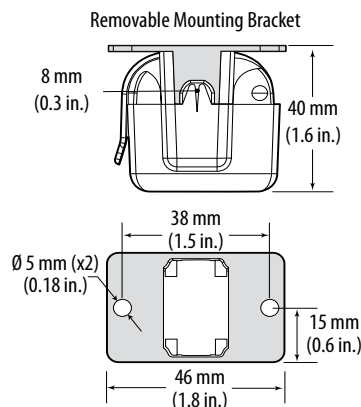

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Follow safe electrical work practices. See NFPA 70E in the USA, or applicable local codes.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Read, understand and follow the instructions before installing this product.
- Turn off all power supplying equipment before working on or inside the equipment.
- Use a properly rated voltage sensing device to confirm power is off.
- DO NOT DEPEND ON THIS PRODUCT FOR VOLTAGE INDICATION
- Only install this product on insulated conductors.

Failure to follow these instructions will result in death or serious injury.

A qualified person is one who has skills and knowledge related to the construction and operation of this electrical equipment and the installation, and has received safety training to recognize and avoid the hazards involved. NEC2011 Article 100

No responsibility is assumed by the manufacturer for any consequences arising out of the use of this material.


NOTICE

- This product is not intended for life or safety applications.
- Do not install this product in hazardous or classified locations.
- The installer is responsible for conformance to all applicable codes.
- Mount this product inside a suitable fire and electrical enclosure.

INSTALLATION

Disconnect and lock out power to the enclosure containing the conductor to be monitored.


1. Locate a mounting surface for the removable mounting bracket that will allow the monitored conductor to pass through the center window when it is installed and that will keep the product at least 13 mm (½ in.) from any uninsulated conductors. Determine cable routing for the controller connection, allowing wiring to reach the mounting location.
2. Drill holes to mount the bracket to the chosen surface using the included screws.
3. Wire the output connections between the sensor and the controller (solid-state contact).
4. Snap the sensor over the wire to be monitored and push the latch until it is securely closed. Clip the assembly to the mounting bracket.
5. Secure the enclosure and reconnect power.

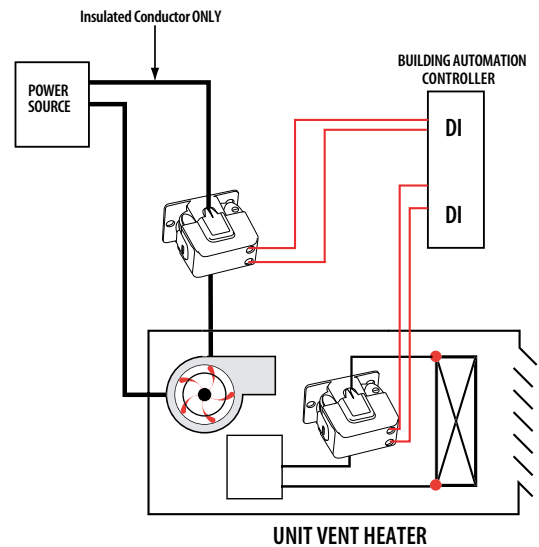

LOW CURRENT APPLICATIONS


< 0.15 A (Sensor Min.)

For load currents less than sensor minimum rating, wrap the monitored conductor through the center window and around the sensor body to produce multiple turns. This increases the current measured by the transducer.

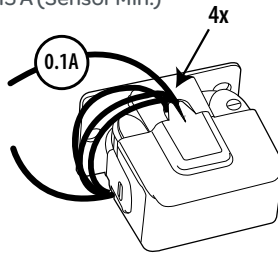

HIGH CURRENT APPLICATIONS

For load currents greater than sensor maximum rating, use a 5 Amp current transformer (CT) as shown. This technique can be combined with wrapping (see above) to add range for a low current load on a high current source.

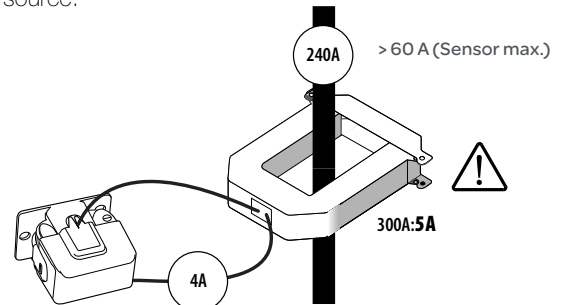

DANGER: 5A CTs can present hazardous voltages. Install CTs in accordance with manufacturer's instructions. Terminate the CT secondary before applying current.

CAUTION

RISK OF EQUIPMENT DAMAGE

- Derate the product's maximum current for the number of turns through the sensing window using the following formula.

$$\text{Rated Max. Amps} \div \text{Number of Turns} = \text{Max. monitored Amps}$$
 e.g.: $100\text{A} \div 4 \text{ Turns} = 25 \text{ Amps max. in monitored conductor}$
- Failure to follow these instructions can result in overheating and permanent equipment damage.

TROUBLESHOOTING

| PROBLEM | SOLUTION |
|--------------------------|--|
| No Reading at Controller | <ul style="list-style-type: none"> • Check for control voltage at sensor (<30 V) • Check for amperage in monitored conductor (>0.15 A) • Assure that sensor core mating surfaces are clean and that the core clamp is completely closed |

PRODUCT INFORMATION

| Ordering Code | Model Number | Description |
|---------------|--------------|-------------------------------|
| 324-0108-000 | H300-S6 | I-Sw,SP,60A,Out1A@30VAC/DC,NO |