



[TAG[MainCharacteristics]]

Rango de producto	Harmony XVB Universal
Tipo de producto o componente	Banco de indicadores
Tipo unidad banco indicador	Unidad audible
Diámetro de montaje	70 mm
Nombre de componente	XVBC
Intensidad de ruido	70...90 dB at 1 m
Tensión de alimentación	12...48 V c.a./c.c.

[TAG[ComplemCharacteristics]]

Tipo señalización	Zumbador continuo o intermitente
Estilo de conjunto	Conjunto de cliente, hasta 5 unidades
Conexiones - terminales	Conexión tornillo de estribo : $\leq 1 \times 1.5 \text{ mm}^2$ con extr. cable
Tensión asignada de aislamiento	250 V conforme a IEC 60947-1
Límite tensión nominal	0,85...1,1 Un conforme a IEC 60947-5-1
Consumo de corriente	< 15 mA
[Uimp] Tensión asignada de resistencia a los choques	4 kV conforme a IEC 60947-1
Frecuencia fundamental	2,8 kHz
Anchura global CAD	70 mm
Altura global CAD	63 mm
Fondo global CAD	70 mm
Peso del producto	0.17 kg

[TAG[EnvCharacteristics]]

certificados de producto	CCC CSA C22-2 No 14 GOST UL 508
normas	EN/IEC 60947-5-1
tratamiento de protección	TC
temperatura ambiente de almacenamiento	-40...70 °C
temperatura ambiente de funcionamiento	-25...50 °C
tipo de protección contra descargas eléctricas	Clase I en tubo de soporte conforme a IEC 61140 Clase II en unidad base conforme a IEC 61140
grado de protección IP	IP65 en la base de fijación XVBZ0. conforme a IEC 60529 IP66 en unidad base conforme a IEC 60529
grado de protección NEMA	NEMA 4X (interior) conforme a UL 508


Contractual warranty

Warranty period	18 months
-----------------	-----------

Indicator Bank without “Flash” Discharge Tube Unit

Dimensions

Below drawing shows the minimum configuration of the product. Select the number of stages according to the product characteristics in order to get **b** dimension.

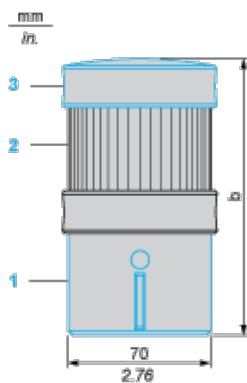


- (1) Base unit XVBC21, to be ordered separately
- (2) Illuminated or audible signalling unit
- (3) Cover (supplied with XVBC21 base unit)

Number of illuminated or audible signalling units (no "flash")	b in mm	b in in.
1	138	5.43
2	201	7.91
3	264	10.39
4	327	12.87
5	390	15.35

Indicator Bank with "Flash" Discharge Tube Unit

Dimensions

Below drawing shows the minimum configuration of the product. Select the number of stages according to the product characteristics in order to get **b** dimension.

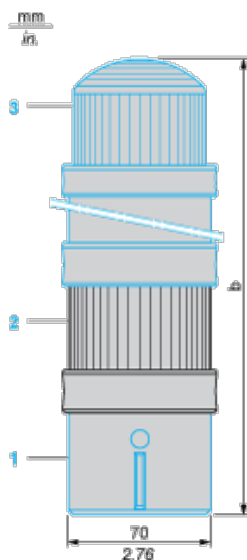

- (1) Base unit XVBC07, to be ordered separately
- (2) Illuminated or audible signalling unit
- (3) "Flash" unit, to be ordered separately


Number of illuminated or audible signalling units other than "flash" tube	b in mm	b in in.
1	295	11.61
2	358	14.09
3	421	16.57
4	484	19.06

Indicator Bank

Adjustment of Audible Signal

By means of 4 microswitches located in the base of the buzzer:

- 2 switches marked 1 and 2 for selecting continuous or intermittent mode (Hz).
- 2 switches marked 3 and 4 for selecting the power (dB) of the audible signal.

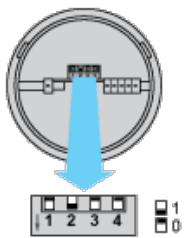

Position of microswitches		Setting
1	2	Mode
1	1	continuous: 2.8 kHz
1	0	continuous: 2.8 kHz
0	1	intermittent: 5 Hz
0	0	intermittent: 1 Hz

Position of microswitches		Setting
3	4	Power
1	1	90 dB
0	1	85 dB
1	0	80 dB
0	0	70 dB