

PHILIPS

UV-C disinfection chamber

4-log¹ disinfection in minutes

An excellent combination of unique design and effective surface disinfection, for professional use



Not commercially released. Please note that this brochure is based on a product (including components and functionality) ("Product") which has not been fully qualified by Signify yet, and/or which is still undergoing final testing and review before its official commercial release. Further, based on the outcome of the qualification, tests and reviews, Signify may make changes to the specifications, claims (including the 4-log disinfection claim, which is, at the time of release of this brochure, based on engineering sample and simulation data), design, materials, fit and finish of the Product or change functionality, working methods, communication systems, software or any other elements thereof and change the terms and conditions and documentation applicable to the sale and delivery of the Product. You understand and agree that you are not entitled to and/or cannot derive any rights vis-à-vis Signify or other parties based on or from any specifications, claims, designs, materials, information and/or data contained in this brochure. In addition, Signify may at its entire discretion decide whether or not to commercially release the Product. As a consequence, Signify does not commit to the availability of commercially released versions of the Product, or, if so, to the availability date of the commercially released version of the Product. Further, Signify does not commit to the subsequent delivery lead times of the Product, it being understood however that Signify will use commercially reasonable efforts to deliver Products in accordance with the agreed indicative lead times.

¹ The 4-log disinfection claim is based on engineering sample and simulation data. The Philips UV-C Chamber will undergo a final qualification, testing and review before its official commercial release. This may result in changes to the claims made in this brochure, in particular with regard to the 4-log disinfection claim. Signify reserves all rights to, at its sole discretion, modify and/or change this or other claims as a result of the final qualification, testing and review of the product.

Effectiveness of UV-C on COVID-19 confirmed


Based on the data made available to us by the National Emerging Infectious Diseases Laboratories (NEIDL)¹ at Boston University, which will be the subject of a forthcoming scientific publication by Boston University, in a laboratory setting², Signify's UV-C light sources irradiating the surface of a material inoculated with SARS-CoV-2 (the virus that causes the COVID-19 disease) at a UV-C dose of 5mJ/cm² (exposure time 6 seconds) resulted in a 99% reduction of the SARS-CoV-2 virus present on that surface. The same study determined that a UV-C dose of 22mJ/cm² results in a reduction of 99.9999% of SARS-CoV-2 virus on that surface (exposure time 25 seconds).³

Signify is the leader in UV-C light sources and has been at the forefront of UV technology for more than 35 years. It has a proven track record of innovation in UV-C lighting, which is designed, manufactured and installed in line with the highest safety standards.

¹ The NEIDL is a state-of-the-art research facility that encompasses significant containment laboratories at Biosafety Level -2, -3, and -4.

² The experiment based upon which these test results and data were obtained was conducted by Dr. Anthony Griffiths, Associate Professor of Microbiology at Boston University School of Medicine, and Dr. Griffiths' team, at the premises of the National Emerging Infectious Diseases Laboratories at Boston University, located in Boston, Massachusetts, United States of America.

³ Research variables are available upon request.

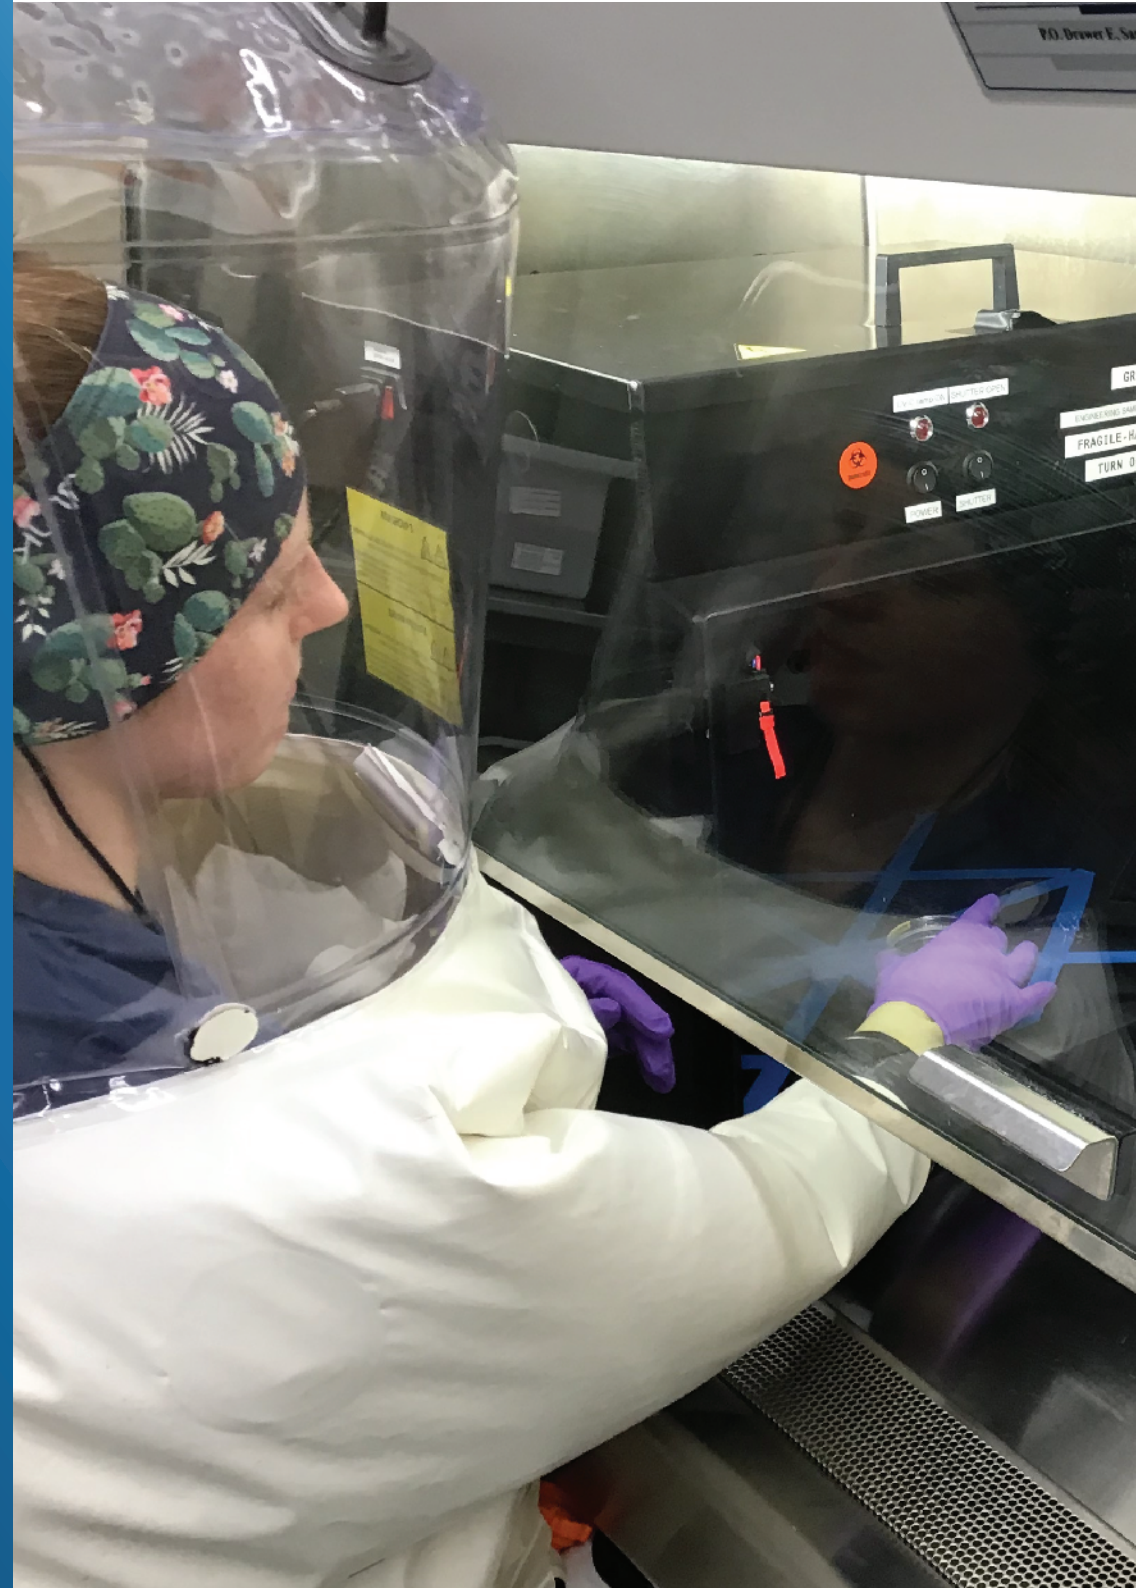

UV-C disinfection chamber

UV-C disinfection chamber is intended to be used for disinfection surfaces of objects other than medical devices. UV-C effectively inactivates many viruses and pathogens on directly irradiated surfaces.¹

The UVC disinfection chamber will be available in three variants small, medium, large.

- Small UVCC 100 with height of 450mm (66-liters)**
- Medium UVCC 200 with height of 600mm (112-liters)*
- Large UVCC 300 with height of 1700 (323 liters)**

The UV-C disinfection chamber design optimizes the effectiveness of Philips UV-C lamp (253.7nm) to provide 4-log (99.99%) disinfection with time guidelines and avoid over exposure to the object.²


UV-C disinfection chamber is designed for versatile objects surface disinfection. This UV-C product is not approved and/or certified as a medical device.

*Delivery from August 2020

** Delivery from September 2020

¹ Fluence (UV Dose) Required to Achieve Incremental Log Inactivation of Bacteria, Protozoa, Viruses and Algae Revised, updated and expanded by Adel Haji Malayeri, Madjid Mohseni, Bill Cairns and James R. Bolton. With earlier contributions by Gabriel Chevretils (2006) and Eric Caron (2006) With peer review by Benoit Barbeau, Harold Wright (1999) and Karl G. Linden.

² The 4-log disinfection claim is based on engineering sample and simulation data. The Philips UV-C Chamber will undergo a final qualification, testing and review before its official commercial release. This may result in changes to the claims made in this brochure, in particular with regard to the 4-log disinfection claim. Signify reserves all rights to, at its sole discretion, modify and/or change this or other claims as a result of the final qualification, testing and review of the product.

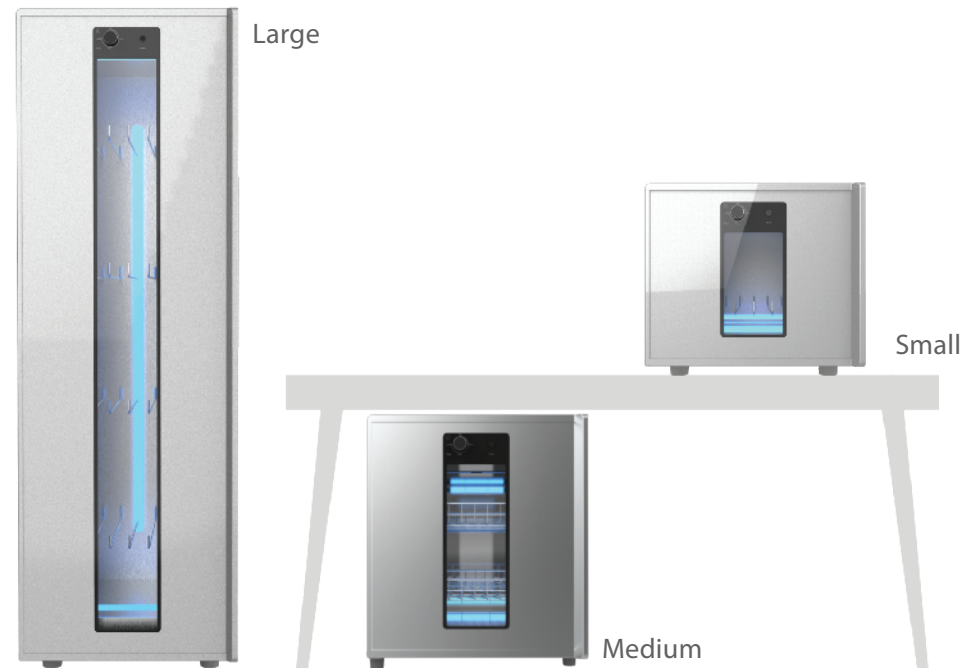

Effective

- 4-log disinfection²

Fast

- Can disinfect surface of the objects in minutes with 4-log (99.99%) disinfection²

Environment friendly

- Chemical free disinfection, no residuals on object surface.
- No collateral damage to the environment of use.
- Ozone free (Ozone is a poisonous gas; it creates irritation and especially people with respiratory problems such as asthma should not be exposed)

Safety

- The product is fully compliant with the safety standard IEC 62471 (photobiological safety of lamps and lamp systems)"
- * Direct exposure of UV-C is dangerous to living beings, chamber only starts when the door is securely closed, and disinfection cycle is activated
- Auto power off when the chamber is open ensuring no UV-C exposure to user

Robust

- Stainless-Steel chamber with sturdy trays to support heavy items up to 6Kgs
- Easy to use, one touch operation

Features




Prefixed time selector for duration of disinfection. Easy to use, one touch operation.



Optimized window size to maximize UV-C dosage. Blue glow from glass window is a visual indicator for the disinfection cycle in progress.



Two trays for accommodating multiple objects, upper tray is removable to fit bigger objects

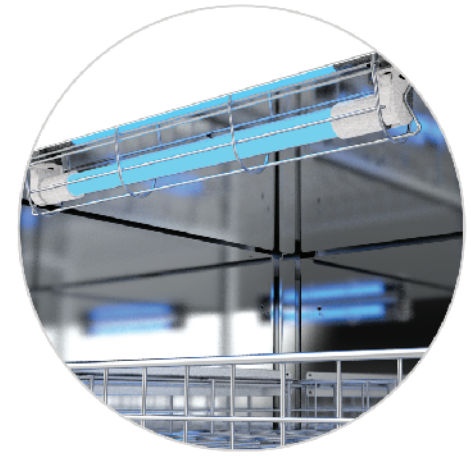

Lamp safety cover, to ensure safety of lamp while accessing trays

Safety



Disinfection starts only when the door is firmly closed. In case of lamp failure, it can be easily detected through the window when lamps are working #







During the disinfection cycle, if the door is accidentally opened by someone the UV-C lamps will automatically turn off, to prevent UV-C exposure.

Applications

| | | | |
|-------------|----------------------------|--------------------------|-----------------------------|
| •Pharmacies | •Schools | •Food courts | •Industries |
| •Offices | •Universities | •Restaurants | •Barber shop Spa |
| •Banks | •Retail | •Industrial kitchens etc | •E- commerce pick up points |
| •Hotel | •Hypermarket, supermarkets | •Fitness centers | •Courier services |

Disinfection Time ²

| Objects | Object size | Recommended disinfection time | Remark | Placement |
|------------------------|-------------------|-------------------------------|----------------------------------|--|
| 2 Big objects | 400mm*350mm*120mm | 10 mins* | Minimum 50mm distance to lamp |  |
| 1 Small object | 150mm*150mm*150mm | 3 mins* | Minimum 50mm distance to lamp |  |
| 1 Big object | 400mm*350mm*320mm | 10 mins* | Minimum 50mm distance to lamp |  |
| Multiple small objects | 150mm*135mm*120mm | 10 mins* | Minimum 50mm (object to objects) |  |

Material Safety


Degradation can be negligible for inorganic materials such as glass, glass fibers, and metal are not affected by UV-C exposure¹. For all organic material degradation refer to ASHRAE research project RP-1509 report. The device cannot be used to disinfect the surfaces of medical devices (such as medical devices in a room, surgical masks and/or surgical respirators)”; The device cannot be used for disinfection of human skin.

² The 4-log disinfection claim is based on engineering sample and simulation data. The Philips UV-C Chamber will undergo a final qualification, testing and review before its official commercial release. This may result in changes to the claims made in this brochure, in particular with regard to the 4-log disinfection claim. Signify reserves all rights to, at its sole discretion, modify and/or change this or other claims as a result of the final qualification, testing and review of the product.

¹ Based on study from Kauffman 2011, 2012; Kauffman and Wolf 2012, 2013

Specifications

Tray details

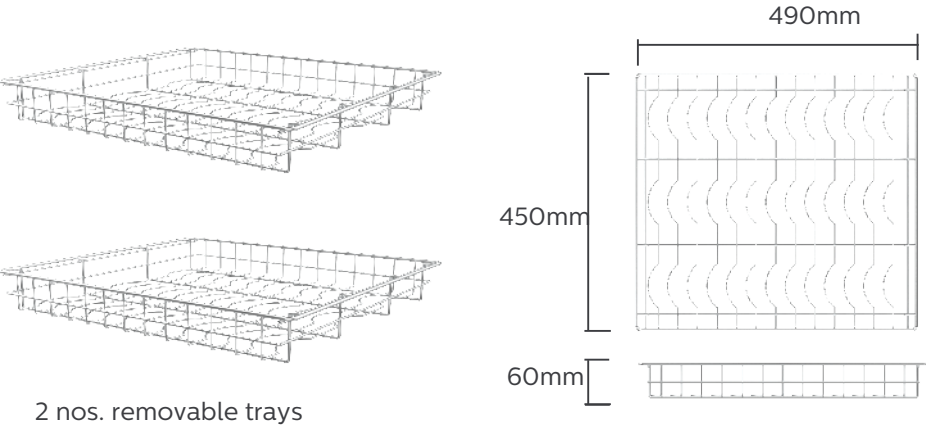

Chamber dimensions



Technical specifications- medium -UVCC 200

| S. No | Parameters | Medium -UVCC 200 |
|-------|----------------------|--|
| 1 | Disinfection effect | 4-log disinfection ² (mJ/cm2) |
| 2 | Input voltage | 220-240V , 50/60 Hz |
| 3 | Total power | 80W |
| 4 | UV-C lamp wavelength | 253.7nm |
| 5 | Time setting | Time set up level 3 min/5 min/10min/20min |
| 6 | Ozone free | Yes |
| 7 | Safety start | Yes (power ON when door is closed) |
| 8 | Door open protection | Yes (power OFF when door is open) |
| 9 | Operating temp | +10°C to +40°C |
| 10 | Dimensions | 660 x 560 x 590 (in mm) |
| 11 | Front door | Tempered Glass (Small glass window) |
| 12 | Housing material | Stainless steel/ tempered glass |
| 13 | Warranty | 1 year |

² The 4-log disinfection claim is based on engineering sample and simulation data. The Philips UV-C Chamber will undergo a final qualification, testing and review before its official commercial release. This may result in changes to the claims made in this brochure, in particular with regard to the 4-log disinfection claim. Signify reserves all rights to, at its sole discretion, modify and/or change this or other claims as a result of the final qualification, testing and review of the product..



© 2020 Signify Holding. All rights reserved. The information provided herein is subject to change, without notice. Signify does not give any representation or warranty as to the accuracy or completeness of the information included herein and shall not be liable for any action in reliance thereon. The information presented in this document is not intended as any commercial offer and does not form part of any quotation or contract, unless otherwise agreed by Signify.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. All other trademarks are owned by Signify Holding or their respective owners.